HOW TO PROGRAM A BAOFENG HT TO THE GREEN'S PEAK GMRS REPEATER.

- 1. Turn the radio on and make sure it is unlocked.
 - A. If you see a tiny key symbol in front of the battery indicator in the upper, far right hand part of the display it is locked.
 - 1. Press an hold the # key (the last one on the keypad) for about a second.
 - 2. The radio should announce "UNLOCKED".
- 2. Make sure the top frequency is active.
 - A. If not, press the blue "A/B" button until the tiny triangle to the left of the frequency display is next to the top frequency.
- 3. Using the keypad, enter 462700. This is the output frequency for the Green's Peak repeater.
- 4. Press the "Menu Button" (First button on the keypad)
- 5. "SQL" should be displayed with a tiny flashing "0" above the battery indicator.
 - A. If not, press the up or down arrow keys till it is.

Ok, here is where you might get a little confused because if nothing is entered in a few seconds, the display will revert back to the frequency mode. If it does that, just press "MENU" again.

- 6. Press "MENU "again
 - A. The radio should announce "Squelch" and you can change the squelch setting with the arrow keys.
- 7. Set the squelch to 3 or 4 using the arrow keys.
- 8. Press the "Menu" key one more time and the radio should announce "Confirmed"
- 9. Press the up arrow key to advance to the next setting, which should be "STEP" and repeat the process.

Here are the settings that work.

0	SQL	2
1	STEP	25.0K
2	TXP	HIGH
3	SAVE	1
4	VOX	OFF
5	WN	WIDE
6.	ABR	5
7	TDR	OFF
8	BEEP	OFF
9	TOT	60
10	R-DCS	OFF
11	R-CTCS	141.3HZ
12	T-DCS	OFF
13	T-CTCS	141.3 HZ
14	VOICE	ENG
15	ANI-ID	(LEAVE IT WHEREVER IT'S AT)
16	DTMFST	OFF

```
17
     S-CODE
                1
18
     SC-REV
                TO
19
                OFF
     PTT-ID
20
     PTT-LT
                5
21
     MDF-A
                FREQ
22
     MDF-B
                FRE
23
     BCL
                OFF
24
     AUTOLK
                OFF
25
     SFD-D
26
     OFFSET
                005.000
27
                CH-000
     MEM-CH
28
     DEL CH
                CH-000
29
     WT-LED
                (WHATEVER)
30
     RX -LED
                BLUE
31
     TX-LED
                ORANGE
32
     AL--MOD
                SITE
33
     BAND
                UHF
34
     TDR-AB
                Α
35
     STE
                OFF
36
     RP-STE
37
     RPT-RL
                OFF
38
     PONMSG
                MSG
39
     ROGER
                OFF
40
     RESET
                ALL (BE CAREFUL HERE, PRESS THE PTT SWITCH TO
                RETURN TO THE MAIN SCREEN)
```

CHECK TO SEE IF 462.700 IS IN THE TOP FREQ DISPLAY. PRESS THE PUSH TO TALK AND SEE IF IT CHANGES TO 467.700.

If you did everything right, it should work.

Press and hold the # key to lock the HT

If you didn't I guess you'll have to start over.

We are currently doing a range test to see how well these fortune cookie radios perform on this repeater here in Heber. I can kerchunk the repeater from my office inside the house with a Baofeng and rubber ducky. Matt can hear me clearly when I hook it up to a base antenna.